 




# TMS PLUS

## BORE PLANNING SOFTWARE

Planning a bore in advance reduces complications and saves time and money. With **Subsite® TMS Plus**, a Windows®-based management tool, you can plan the bore, monitor its real-time progress and print out a completed survey.

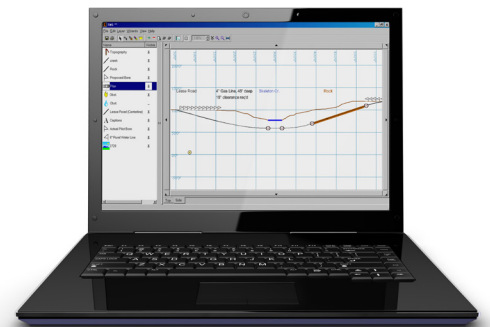

### KEY FEATURES

 
- Intuitive menus and online user guide make the software easy to use.
- TMS Plus enables you to create multiple bore plans for the same job based on different units or paths.
- Records the drill head position each time a new drill pipe is placed in the ground, and the position of the actual product during backreaming.
- Works with Subsite guidance equipment to create a record of the installed bore path.
- Compiles information such as pipe number, depth estimate, drill head roll angle, pitch, directional beacon temperature and battery level, date and time.
- Supports five languages—English, German, French, Spanish and Italian—and adapts to different international settings.
- Provides quick-reference information on bend radius for more efficient use of drill pipe and installed product.



**SUBSITE®**

ELECTRONICS

subsite.com

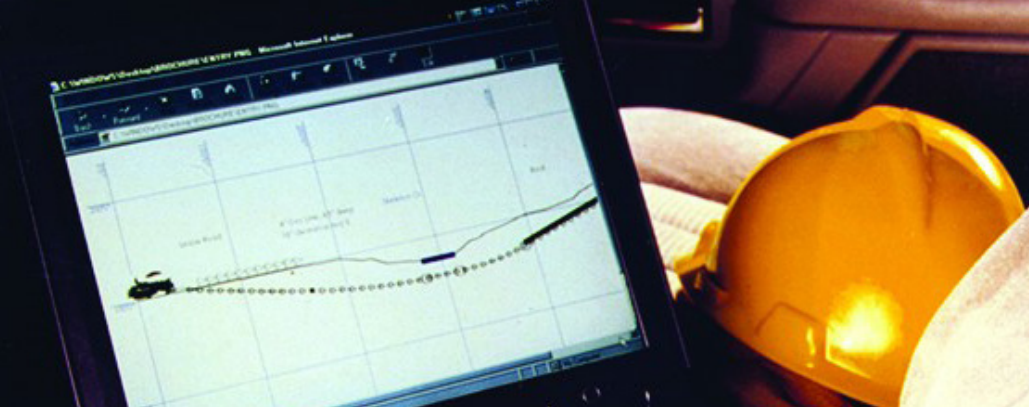

## TMS PLUS MANAGEMENT TOOL

TMS Plus lets you manage your jobs more efficiently, so you can be more productive on every jobsite and more profitable throughout the year.

## TMS PLUS BORE PLANNING SOFTWARE SPECIFICATIONS

### EQUIPMENT COMPATIBILITY

TMS Plus will work with any of the following Ditch Witch products:

- 750 Tracker/Display
- 752 Tracker/Display
- 8500 Tracker/Display
- TK Series Trackers
- TD Series Displays

### SYSTEM REQUIREMENTS

To use TMS Plus, we recommend the following:

 
- An Intel® Pentium™ processor or equivalent, 200 MHz or faster running Microsoft® Windows® 98, ME, 2000, XP, Vista, 7
- 16 megabytes or more of RAM
- CD-ROM drive (internal recommended)
- Pointing device (i.e., mouse or touchpad)
- For 750 series, enabled serial port

If you do not have an enabled serial port, you will need one of the following:


- Serial I/O PC card and serial port adaptor (preferred)
- USB serial port adapter
- For 8500 series, enabled USB port

### UPDATES & DOWNLOADS

- TMS Plus, version 3.8.1
- Support for 8500 Tracking System
- Support for Russian language
- New HTML-based help system
- Support for Windows® Vista

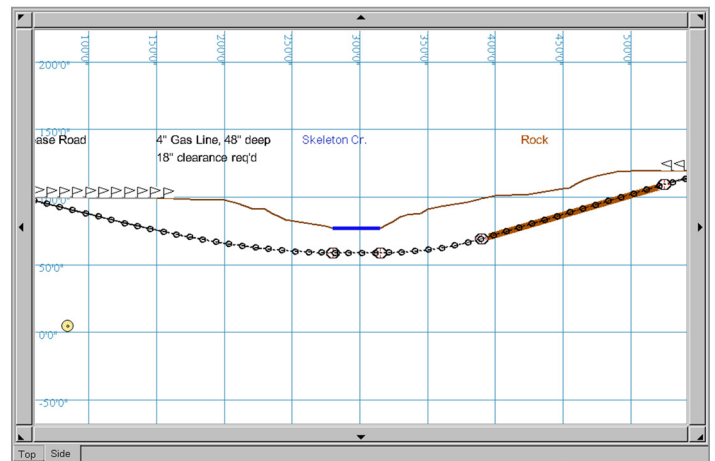

Pilot Bore Path Screen

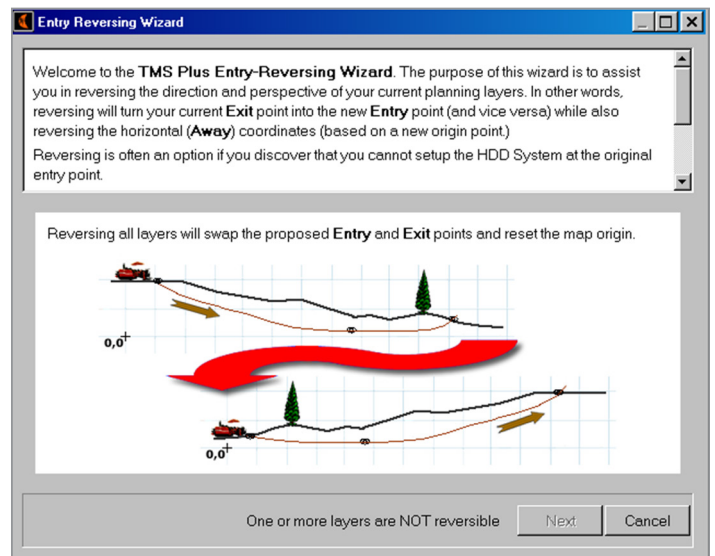 

Entry-Reversing Wizard Screen

